

NewLine User Guide

The Power to Communicate with Anyone


Instantly and Effectively
Communicate. No matter the
Language, Disability, Device, or
Location






Open ILA for First Time/ Sign Up for Trial

Select Language and Accent

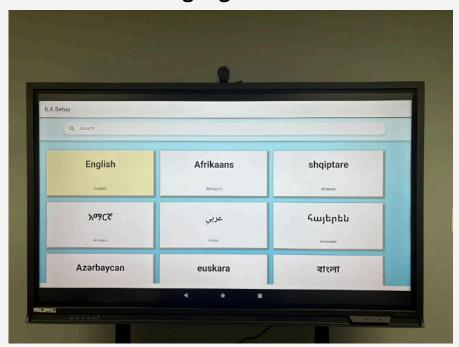

Welcome Page/ Press Start

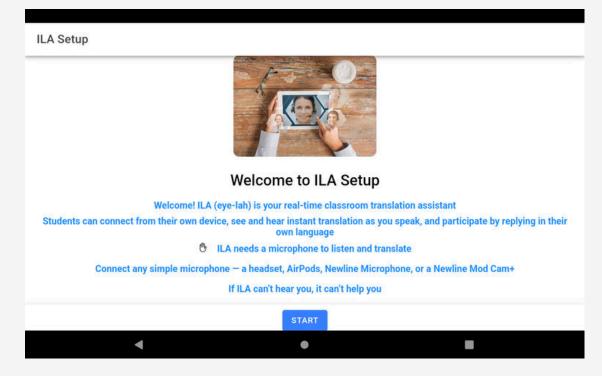

Sign Up

Enter your License Key or Click for Free Trial


ILA Setup						
Device Id: c808a	f72efced487					
License Key						
	or					
Click here to use ILA in trial mode. You'll have access for 14 days of live translation						
		NEXT				
	4	•				

To set up your free trial enter your Name, Email, and Organization

ILA Setup				
Enter your name				
Enter your email address				
Organization				
	VERIFY			
4	•			


Get Started

Locate your broadcast room code

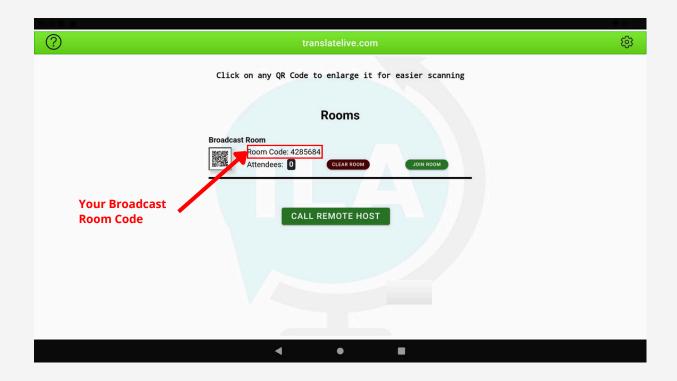

QR Code


View your QR Code by clicking on the QR Code icon

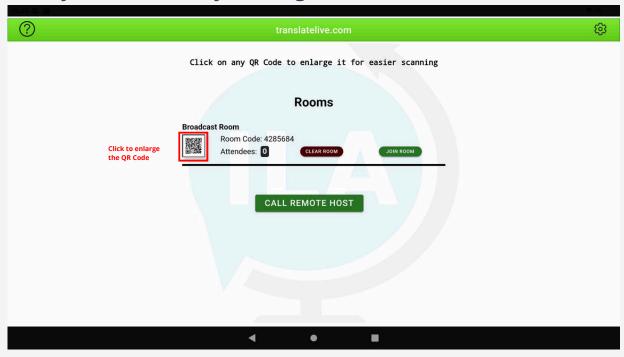



Once enlarged, you will have the ability to copy your QR Code, link or Generate a PDF

Host an ILA Broadcast room by selecting this button.

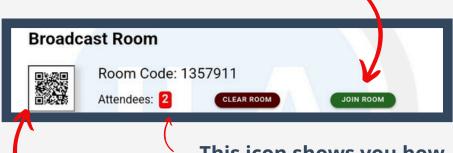


This icon shows you how many people have joined your Broadcast Room


Press on QR code to make it bigger. Students can join by scanning QR code or Going directly to the room link

Host

Select this button to view room participant list.

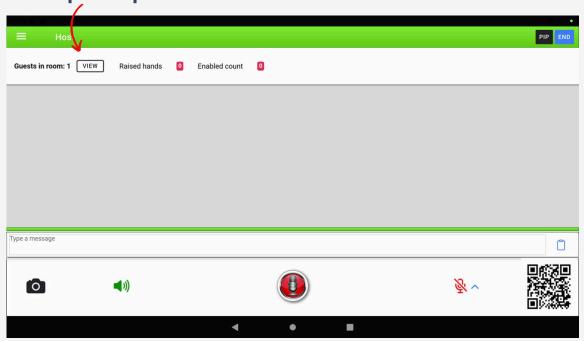

This section shows the number of guests who have requested to speak as well as the number of guests that currently have permission to speak

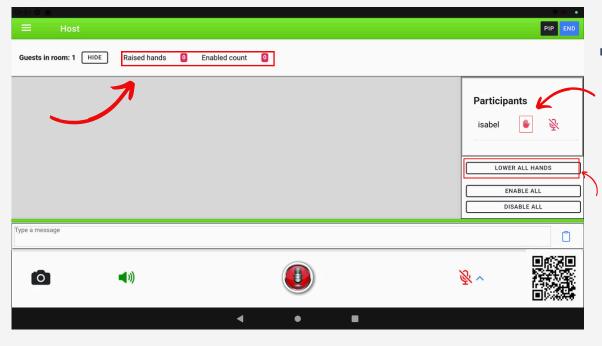


Approve requests to speak by selecting the raise hand button "Lower all hands" will disapprove all requests to speak. You may also enable or disable all guest mics.

In Room Options

Broadcast Hosts will have speech to text capabilities at all times.

Guests must request permission to speak.

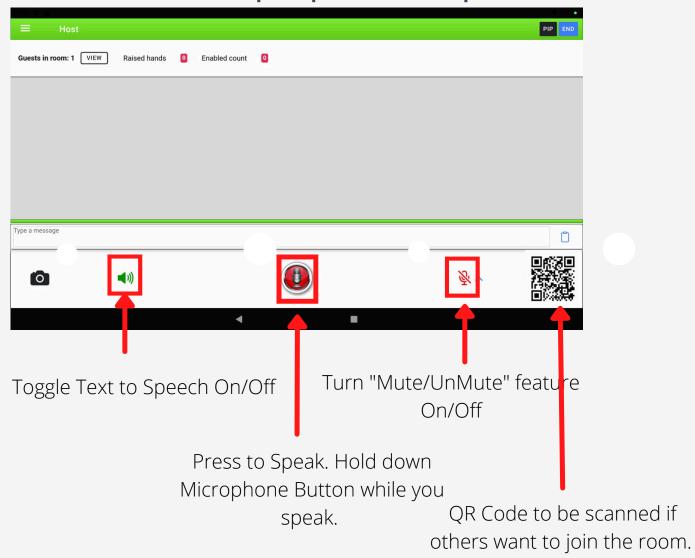

To activate touch and hold the Mic button or press the small Microphone to activate mute/unmute mode while you speak. The button and background will turn green, letting you know it is actively listening.

You may watch the translation in real time to confirm accuracy. Be sure to speak clearly, slowly, and use full sentences.


When the session is over, simply select the "End" button located on the top right of the screen.

Guest- Joining Room

Guest will pick Language and Accent




Everything on this screen will be language guest selected

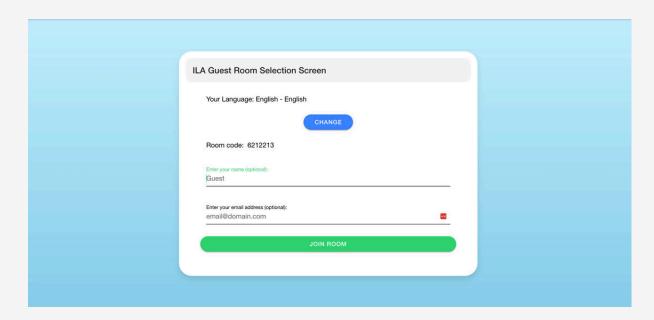

Guest-In Session


(All Text on this page will be in guests selected language)

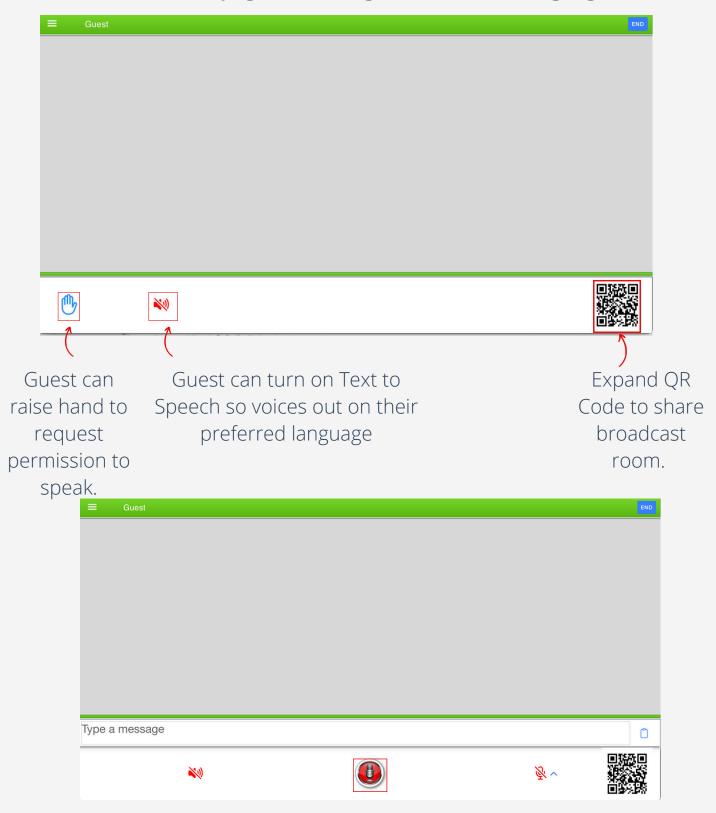

If host gives permission then guest will see red microphones button to press and speak in their native language and will then show on board as well

PIP mode

Click here to use Picture in

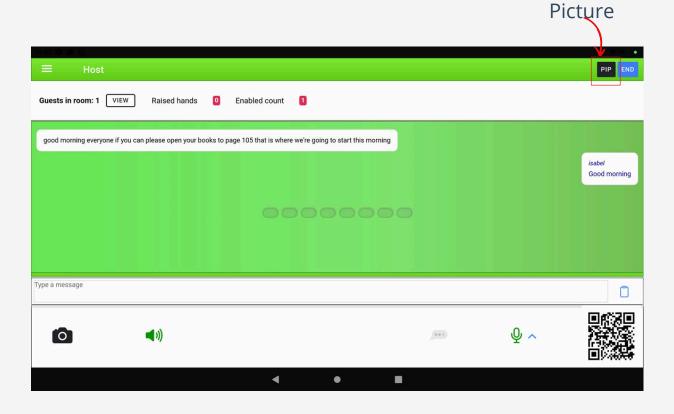





Using PIP shrinks ILA to a small box that shows the QR code to join as well as current STT.

Settings


On the top right, open the settings by selecting the gear icon.

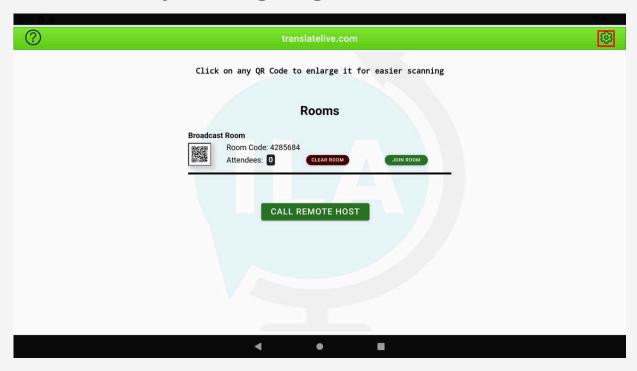

Under the support tab, you can find your Version Number, Device Type, and have the ability to provide feedback

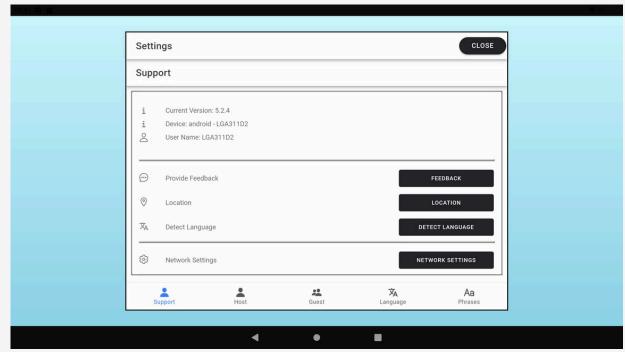

Host Menu

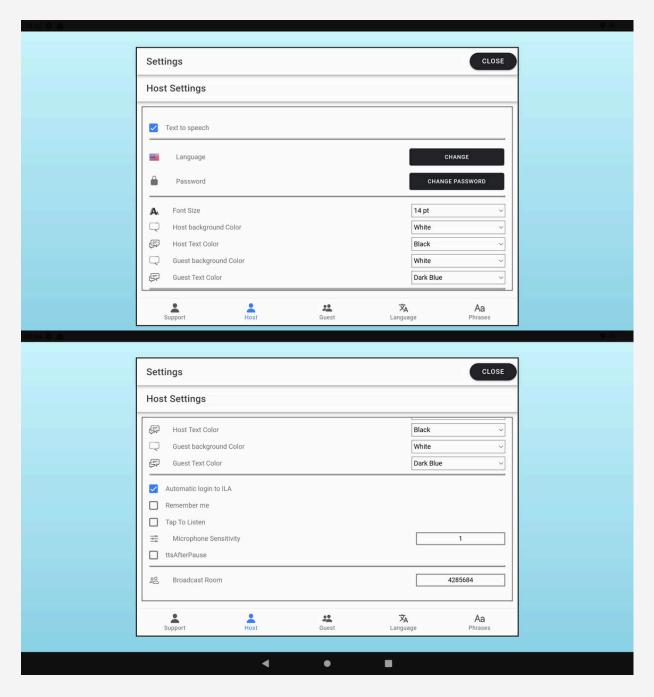

Text to speech: ILA will translate text and speak out loud in users chosen

language.

Language: Change language for host device. **Password:** Change your account password.

Font Size: Adjust font size.

Host Background Color: Adjust background color.


Host Text Color: Change host text color.

Guest Background Color: Change background color for guest speech box.

Guest Text Color: Change text color for guest translation.

Broadcast Room: Your room number

Guest Settings

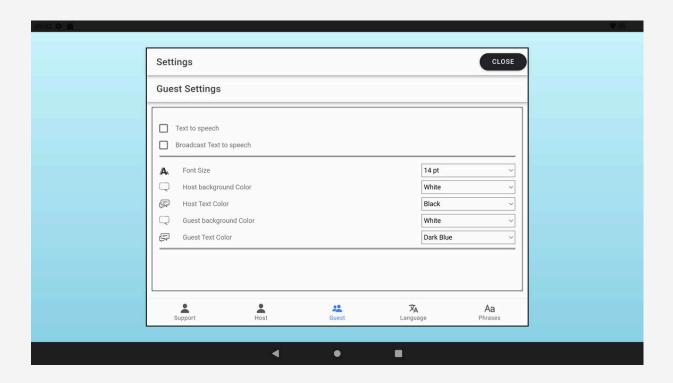

Text to speech: ILA will translate text and speak out loud in users chosen

language.

Font Size: Adjust font size

Host Background Color: Adjust background color.

Host Text Color: Change host text color.


Guest Background Color: Change background color for guest speech box.

Guest Text Color: Change text color for guest translation.

Language Order

Under "Language" tab, set the order of the languages displayed on language selection screen.

Rearrange Language Order

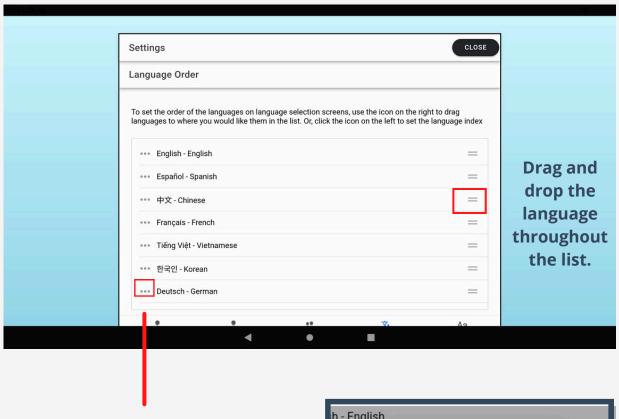

By selecting a language, you can type the position you would like to move it to. ie. Inputting the number 2 will move that language to the 2nd slot.

