


Wall Mount Device Installation Instructions

Unpacking Inspection:

Check whether the packing accessories are complete and whether the packing boxes have any impact damage.

Accessories are as follows:

Wallboard: 1pcs

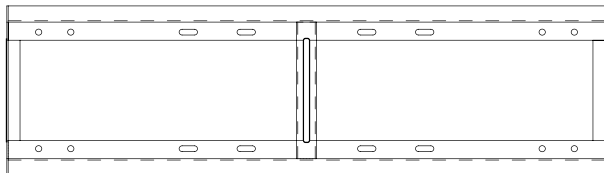


Wall mount parts: 2pcs



Expansion screw bag (including expansion plug, screws): 1pcs

1. Wallboard Installation: Mount the wallboard on the wall with metal expansion screws.


Drill holes if necessary to ensure adequate strength of connection between the wall and the screws.

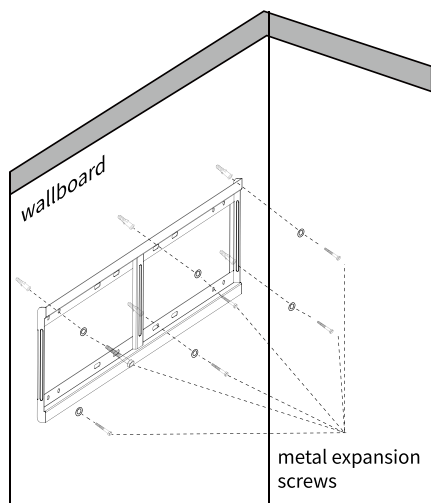

WARNING

Before drilling, make sure there is no wiring inside the wall, in case the equipment is electrocuted; Adjust the position of the wallboard with the level gauge to ensure the level of the installation position; please ensure the wall can support the weight of the equipment. We recommend that the wall surface be reinforced and have a loading capacity 4 times of the weight of the equipment; Installation on hollow wallboard or non-load-bearing board is prohibited.

2. Hanging Bar Installation: There are 4 mounting holes on the back panel, as shown in the figure below, the hanging bar is fixed on the back panel with M8 screw. Pay attention to the direction of the hook when fixing the hanging bar.

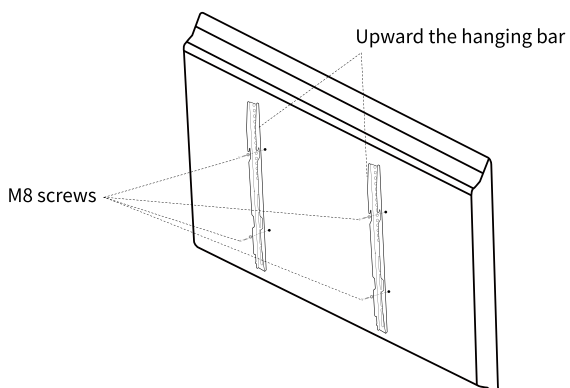

3. Equipment Installation: Hang the equipment with the hanging bar into the wallboard, fine adjust the position and angle to ensure the stability of the equipment.

